

## Scurion<sup>®</sup> heat sink upgrade

---


- 1** Remove the two screws holding the mounting bracket.




- 2** Distribute the thermal compound onto the heat sink in a star shaped pattern. Use thermal grease sparingly!



**3** Fix the heat sink using four screws and remove excess thermal grease.

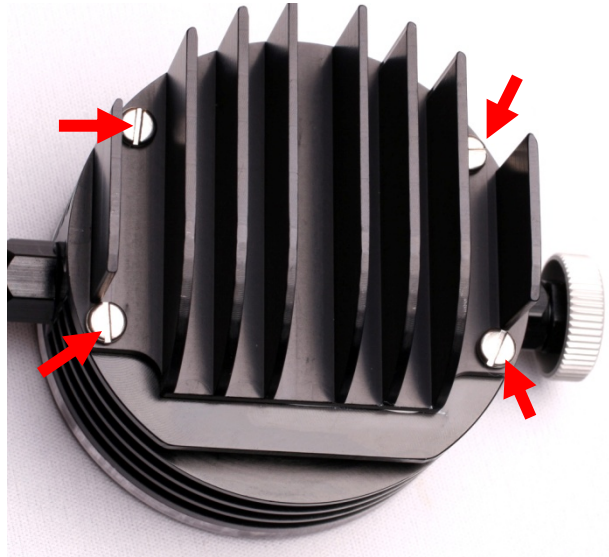

**4** Reattach the lamp head, inserting the plastic washer between lamp case and bracket.

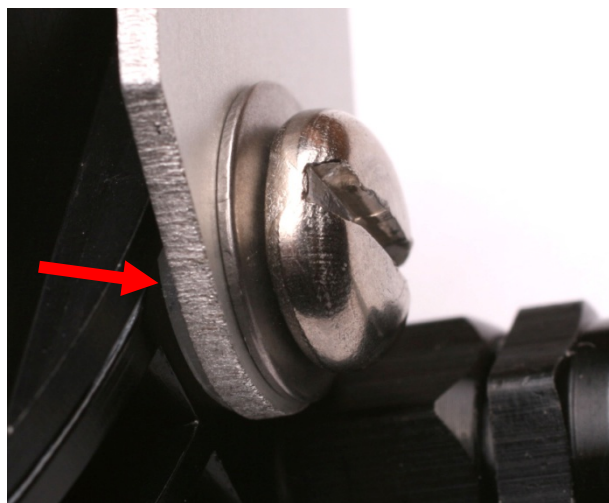

**5** When reinserting the screws, do not over tighten them! Doing so will damage the spring washers (red arrow). Make sure the conical spring washers are mounted correctly, see orientation in image!

