

# SCURION® - Assembling Guide



The Assembling set contains:

- 2 longer screws for the attachment of the battery case,
- 3 shorter screws for the fixation of the lamp holder on the helmet,
- 2 plastic fixations with corresponding screws for the fixation of the lamp cable.

We recommend leading the lamp cable on the inner side of the helmet. Alternatively of course you can use the two provided plastic fixations in order to fasten the cable outside to the edge of helmet.



Prepared drillings for the lamp holder




Mounted lamp holder



Battery case



Mounted battery case

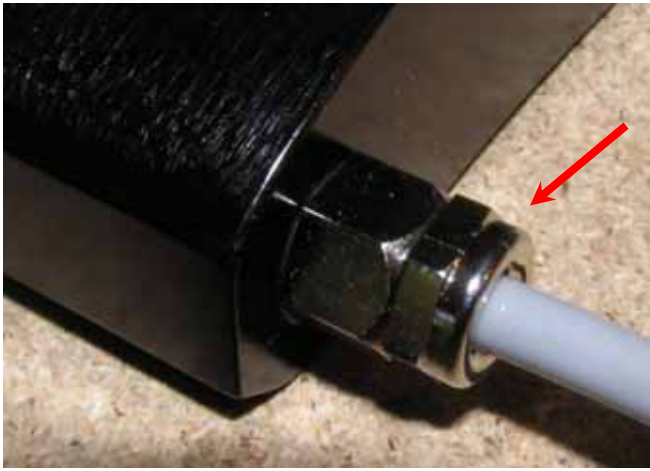

The Scurion® is probably delivered fully assembled – i.e. head and battery casing are connected.

So that the cable can be led through the helmet, it must be detached first from the battery case in this case. To do that simply unscrew the outer screw connection (arrow) The cable can subsequently be pulled out.

**(ATTENTION important to waterproof!) When assembling again check that this feed through sits well (screw it feeling, not with force).**



The plug at the cable can further be dismantled, but **(ATTENTION!)** you must previously mark the polarity of the plug.

Now the two small metal tongues can (e.g. with tweezers) be pressed down carefully (!) and not too deeply - and the veins are set free one after the other.



Now the cable can be pulled through easily by a hole in the helmet. With some helmet models you do not even have to drill separate holes (see example).



This picture to give you an idea how the cable can be placed without that excess cable makes an exposed loop that is vulnerable to break.

The latest battery casings have the feed trough at the side and enough space inside so that excess cable can be also placed inside the battery casing!

**We are glad to help you if you face any problem → contact us on our forum or by email!**

[www.scurion.ch](http://www.scurion.ch)